

LXG Power Harrow /Plow



FHM

**FARMER-HELPER
MACHINERY COMPANY**



OPERATION & PARTS MANUAL

Please read these instructions carefully before using! Always grease all fittings and be sure to always check and fill with oil before operating! RETAIN THIS MANUAL FOR FUTURE REFERENCE. GREASE ALL FITTINGS BEFORE OPERATING!



Betstco
83371 Melton Rd., Creswell OR 97426

Phone: 541-895-3083
www.betstco.com

Specifications subject to change without notice.

1. Preface:

Dear Customer:

With its five tine units, the rotary power plow type power harrow is an ideal implement for tilling the soil and preparing seed-beds on farms and in vineyards or orchards, as well as for row crops and specialty crops.

Please read these operating instructions through carefully before using the rotary power harrow and strictly follow all the instructions so that the rotary harrow can be used safely and correctly, for its intended purpose.

The power harrow may only be used by persons who have the required professional know-how and who have also read and understood these operating instructions.

Please ensure that you know how to handle and operate the power harrow before using it!

General information:

- The rotary power harrow may only be used for the specified purpose: mechanical soil tillage and seed-bed preparation.
- The power harrow may only be started and stopped from the tractor driver's seat. No one may remain within a distance of less than 10 meters around the rotary harrow during its operation.
- The power harrow may only be operated in full daylight.
- The power harrow may only be operated when all guards and safety mechanisms are installed and fully functional.
- Malfunctions impairing safety must immediately be remedied by specialist personnel.
- The accident prevention regulations issued by the employers' liability insurance association must be observed.
- The traffic regulations must be observed when driving on public roads.
- The PTO shaft must be disengaged from the tractor during all maintenance and repair work on the power harrow in order to prevent inadvertent start-up.
- Repairs should only be undertaken by specialist repair shops or the customer service center. The rotary power harrow should never be modified without authorization.
- The power harrow may only be operated with a PTO shaft with friction clutch.

2. Description of the machine:

The rotary power harrow may be used for mechanical soil tillage and seed-bed preparation on farms and in vineyards and orchards, as well as for row crops and specialty crops.

Moisture remains in the soil and the water balance of the soil is maintained since the soil is not turned up as it is tilled. The vertically rotating cutters also prevent compaction of the soil, thus resulting in optimum preparation of the seed-beds.

The power harrow is mounted on the tractor by means of a three-point suspension. It has five tine units; the tine pick-up is rigidly mounted. The gear mechanism is driven via a PTO shaft and drives the cutters in the housing via gear wheels.

The working depth is set by means of a hand spindle in combination with the support roller. The friction clutch mounted on the PTO shaft protects both the harrow and the tractor from damage if overloaded. An additional machine, such as a seeder, can be connected to the rotary harrow via a further three-point suspension on the basic unit and a PTO shaft on the main gear unit. In this way, the seed-bed can be prepared and the seed sown in a single pass.

The working depth should be adjusted in line with the prevailing ground conditions in order to obtain the best possible results. Large objects should be removed from the ground beforehand so that the soil can be tilled correctly and to prevent premature wear on the tines.

The housing accommodates the various components making up the rotary power harrow. The support roller, three-point frame, angular gear and tine units are bolted onto the housing.

The three-point frame is made of robust sheet metal and bolted onto the housing. The bolts of the lower links support can be undone and the three-point frame displaced sideways on the rectangular profile of the housing for off-center operation.

The angular gear which is mounted on the housing diverts the tractor's rotary motion through 90° and drives the tine units via gear wheels.

Each tine unit comprises a tine flange, guard plate, two tines, bearing housing, bearing and connecting elements. The tines are mounted underneath the guard plate and serve to loosen the soil. They are secured by means of special bushings, washers, bolts and lock nuts.

3. Start-up and operation of the machine:

* Before using the machine for the first time

- Read through the operating instructions for the rotary power harrow and additional attachments and ensure that you are fully familiar with the mode of operation of all units.
- Check that the length of the PTO shaft fits your tractor. The PTO shaft should include an appropriate protective mechanism!

* Attachment to the tractor

- Examine tools (tines) and tine carriers for signs of wear and ensure they are secured correctly.
- Check that the support roller and three-point frame are correctly secured to the housing.
- Now connect the power harrow to the tractor by means of the three-point suspension. Secure the bolts of the upper and lower links with spring pins. Park the tractor on level ground and adjust the upper link so that the rotary power harrow is horizontal.
- Now adjust the length of the

PTO shaft to match your tractor.

For this purpose, hold the two halves of the PTO shaft side-by-side in the shortest lift out position and mark it accordingly.

Shorten the inner and outer protective tube by equal amounts. Then shorten the inner and outer sliding profile by the same amount as the protective tube. Finally round off the outer edges and carefully remove all chips. Grease the sliding profiles.

Before engaging the PTO shaft, carefully clean and grease the PTO shaft of the tractor and power harrow. Then slide the PTO shaft over the PTO shaft until the locking pin engages completely.

The friction clutch of the PTO shaft must be mounted at the machine end.

The working depth is now adjusted with the aid of the hand spindle in accordance with ground condition on a firm and level substrate or by lifting the unit completely. The power harrow with fitted tools and attachments is now ready for use.

*** Working with the power harrow**

- The tractor PTO shaft must not be switched on until it is certain that the shaft will rotate at not more than 540 rpm at maximum engine speed.
- The PTO drive must not be engaged when the tractor drives running at full load.
- The power harrow may only be started and stopped from the tractor driver's seat.
- The power harrow may only be switched on when there is no-one within its range of operation and hazard area (radius of 10 m from the rotary harrow) due to the risk of objects, such as stones, being hurled away from the machine. The duly prepared machine must be lowered to the working position before it is switched on. The rotary power harrow can then be switched on.
- The machine must be lowered slowly in order to avoid damage to the tools and attachments.
- During the work, the machine must be lowered to the working depth and left with the set control hydraulics. The horizontal position of the rotary power harrow can be corrected by means of the upper link.
- The areas to be tilled should be inspected for visible large obstacles before starting so that they can be removed from the harrow's range and thus prevent damage to the tines and drive elements.
- If a reversing maneuver is required at the end of the row being tilled, the tractor PTO must be switched off and the rotary harrow allowed to come to a complete standstill before it is lifted out of the ground for the maneuver (risk of clods of earth being hurled off by the tines).
- If the frame has been fully fitted with tools, its stability will be assured even without support wheels.
- Dust clouds may form when operating the power harrow at higher speeds on dry ground. Light respiratory protection should therefore be worn when using a tractor without closed driver's cab.

4. Maintenance, Care & Transport

The PTO shaft must always be disengaged and the ignition key removed before starting any maintenance and repair work on the power harrow!

Maintenance or repair work must never be performed underneath the rotary power harrow without appropriate supports. Precautions must always be taken to prevent the machine from dropping inadvertently, for instance by using hoisting gear.

The rotary power harrow should always be placed on firm, level ground.

The power harrow type LXG is designed and built to require as little maintenance and care as possible.

However, the following points should be observed nevertheless:

- All nuts, bolts and screws must be examined after the first five hours of operation and then always before using the machine in order to ensure that they are secure. They must be re tightened if necessary.
- The PTO shaft must be lubricated with sufficient sulphur-free grease every eight hours of operation so that it can always be extended and retracted without difficulty. The bearing points on the cutter unit, the spindle for setting the working depth and the roller mount must be lubricated every 30 hours of operation via the corresponding grease nipples.
- The oil must be checked every 20 hours of operation.
- Gear oil must be changed after approx. 200 hours of operation. A container must be placed under the machine to collect the escaping oil and prevent contamination of the ground. Waste oil must be disposed of in accordance with the regulations.
- The rotary power harrow should be stored in a dry place, on firm, level ground. It should be secured with chocks or similar objects to prevent inadvertent tilting.
- The machine must be thoroughly cleaned before prolonged storage. Those parts which are in contact with the ground during operation should be sprayed with corrosion inhibitor.
- Particular attention must be paid to the condition of the tines in order to ensure maximum occupational safety and high-quality results. Before starting work, the tine must therefore be examined to ensure they are correctly secured and wear down evenly. Bent tines must be replaced immediately.
- Vibrations in the rotary power harrow are usually due to imbalances in the tine unit and may damage the machine. Switch off the rotary power harrow and the tractor if the vibrations increase significantly during operation or if the machine's running noise changes suddenly. The cause must be located and remedied before resuming work.

- When cleaning the machine with a high-pressure cleaner, care must be taken not to direct the high-pressure jet against bearings and seals, as this can result in malfunctions and premature failure of the machine.
- The screw connections between tines and tine flange / guard plate must be checked regularly. Always fit new lock nuts and new washers whenever the screw connections have been removed. The condition and degree of wear on the tines and tine pick-up must be checked regularly.
- When transporting the machine, care must be taken to ensure that there is no one and nothing in the immediate vicinity when slung outwards with the tractor.
- The power harrow should only be repaired by a specialist repair shop or a authorized customer service center.

Changing and regrinding tines:

Tines should only be reground and changed by your dealer, since considerable hazards can arise if they are fitted incorrectly.

Removal of the tines:

- First switch off the tractor and remove the ignition key.
- Disengage the PTO shaft and then the rotary power harrow from the tractor.
Remember to support it so that it cannot tip over inadvertently.
- Turn the power harrow over with the aid of hoisting gear so that the tines can be reached without difficulty.
- Remove the fastening bolt and nut with a suitable wrench.
- Important: For safety reasons, new self-locking nuts and new washers must always be used whenever the tints are changed.
Ensure that the tines are fitted correctly in the direction of rotation.

Installation of the tines:

- Fit the tines in the correct order.
- Fit the fastening bolt, washers and nut.
- Tighten the self-locking nut twice.

Regrinding the tines:

If the tines have to be reground, care must be taken to ensure that each pair of tines in the tine unit is reground. This prevents the tine unit concerned becoming imbalanced.

Use the transport aids or three-point hitch provided on the housing to transport and handle the power harrow.

5. Safety Instructions:

- The Implements may only be used when all safety mechanisms are in place and fully functional.
- All faults capable of impairing safety must immediately be remedied by specialist personnel.
- The operating instructions of any additional attachments installed must be read through carefully and observed.
- Never climb onto the tractor or leave it unattended when the PTO shaft is running.
- Never allow anyone who is not familiar with the safety and operating instructions to use the machine.
- Remove all visible large objects which may be picked up and hurled aside by the rotary power harrow. Particular attention must be paid to loose wires on the ground.
- Adjust your driving speed in line with the ground conditions and prevailing circumstances.
- No one may remain within 10 meters of the power harrow during operation of the machine. High risk of injury due to moving machine parts and objects being hurled away from the machine, such as stones, etc.
- Never climb or reach in between the power harrow and the tractor with your arms or legs during operation of the machine – high risk of injury! (This is only permitted when the machine has been lowered to the ground and the tractor switched off.)
- The machine should only be operated in full daylight . Traffic regulations must be observed when driving on public roads. Adequate illumination must be ensured when driving in twilight or darkness (A detachable set of lights is recommended.)
- Never climb or reach in between the support roller and cutter unit with your arms or legs – high risk of injury.
- Always wear tightly fitting clothes so that these cannot be caught between rotating parts of the machine.
- Safety stickers must be kept clean and observed!
- Never open or remove the guard elements during operation. Worn or defective parts must immediately be replaced by new parts.

- The cutter unit must never be operated when the power harrow is lifted off the ground.
- Driving a tractor on steep slopes can be dangerous. If work on steep slopes is unavoidable, great care should be exercised. Do not take bends too tightly.
- No one may ever ride on the machine either during operations or while it is being transported, not even over short distances.
- Always examine the rotary power harrow for signs of damage following a collision with any objects. Such damage must always be repaired before resuming work.
- Maintenance and repair work may only be carried out when the PTO shaft and machine have been disengaged from the tractor.
- Never crawl under a rotary power harrow which is still connected to the tractor, as the machine may be lowered at any time – high risk of injury.
- The accident prevention regulations of the employers' liability insurance association must be observed when using the machine.
- When traveling round bends, take account of the larger width / length (turning circle) and considerable weight of the rotary power harrow.
- Ensure that the PTO shaft halves and protective tubes overlap as prescribed, both in the transport position and in the working position. Read the operating instructions for the PTO shaft in this context.
- The PTO shaft should only be engaged and disengaged when the tractor engine is switched off and the ignition key has been removed.


6. Technical Data:

MODEL	LXG-130 (1BQ1.3)		LXG-170 (1BQ1.7)		LXG-200 (1BQ2.0)	
SPECIFICATION	Inch	Metric	Inch	Metric	Inch	Metric
Structure Weight	617.3lb	280kg	727.5lb	330kg	837.7lb	380kg
Gear Box HP	50hp		50hp		50hp	
No. of Blade	12		16		18	
Tilling Width	51.2"	1300mm	66.9"	1700mm	78.7"	2000mm
Tilling Depth	7.9"	200mm	7.9"	200mm	7.9"	200mm
PTO Turning Speed	540r/min		540r/min		540r/min	
Tractor HP	25-35hp		40-70hp		55-80hp	


7. Safety Decals:




8. Parts Manual:

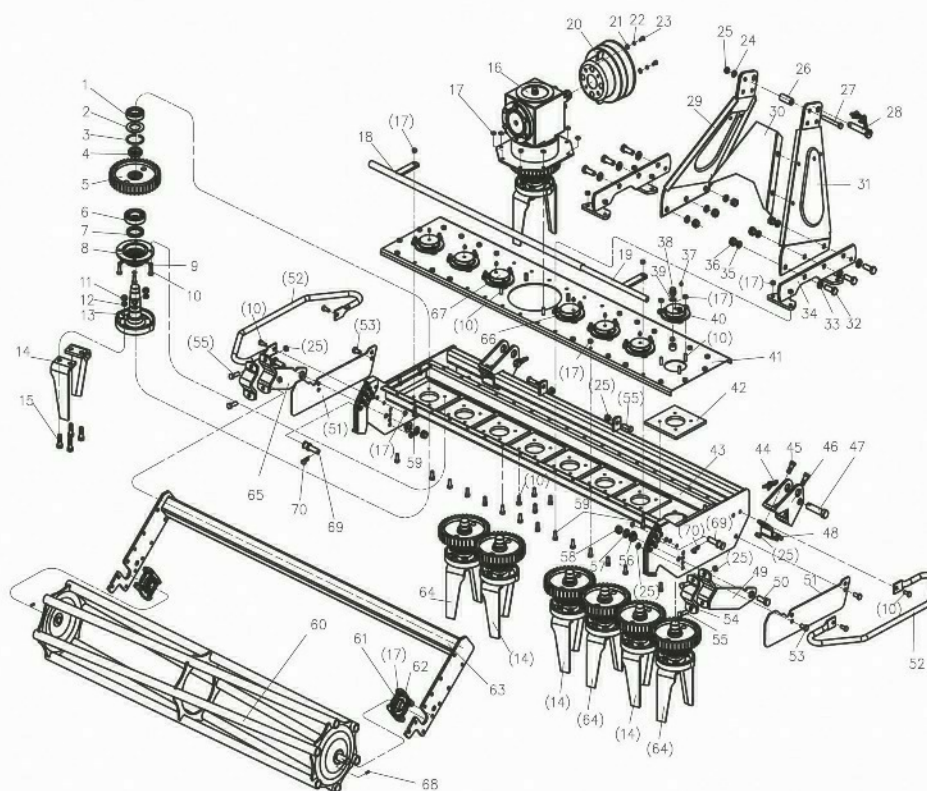

NO.	Part NO.	Name & Specifications	Quantity	Remark
1	GB 278-89	Bearing 60207	7	
2	LXG170.115	Big washer	7	
3	GB 893.1 - 1986	Seeger ring 72	7	
4	LXG170.116	Self locking nut M39x1.5	7	
5	LXG170.118	Export gear(two)	7	
6	GB/T 276-94	Bearing 6209	7	
7	GB 13871 - 1992	Oil seal FB - 50 x 68 x 8	7	
8	LXG170.112	Rotor support down panel(two)	7	
9	GB 93-87	Washer 10	32	
10	GB 5783-86	Bolt M10 x 35	32	
11	GB 6170-86	Nut M14	32	
12	GB 93-87	Washer 14	32	
13	LXG170.110	Colter fixing seat	7	
14	LXG170.109	Colter (one)	8	
15	GB 5782-86	Bolt M14x60	32	
16	LXG170.011	Gear case assembly	1	
17	GB 6184-86	Six corner locknut M10	77	
18	LXG170.018	Staff guage jointing(one)	1	
19	LXG170.020	Staff guage jointing(two)	1	
20	FM120.00.401	Cover	1	
21	GB97.1-85	Washer 8	2	
22	GB93-87	Washer 8	2	
23	GB5783-86	Bolt M8x16	2	
24	GB 97.1-85	Washer 12	2	
25	GB6184-86	Six corner locknut M12	2	
26	MZ105.130	Bushing	2	
27	GB 5782-86	Bolt M12x100	2	
28	EF100.00.019	Above append pin	1	
29	LXG170.029	Sx 3rd point	1	
30	LXG170.104	Reinforcement	1	
31	LXG170.028	Dx 3rd point	1	
32	GB 5782-86	Bolt M16x45	6	
33	GB 97.1-85	Washer 16	6	
34	LXG170.012	Impendend connect fixing join	2	
35	GB 93-87	Washer 16	6	

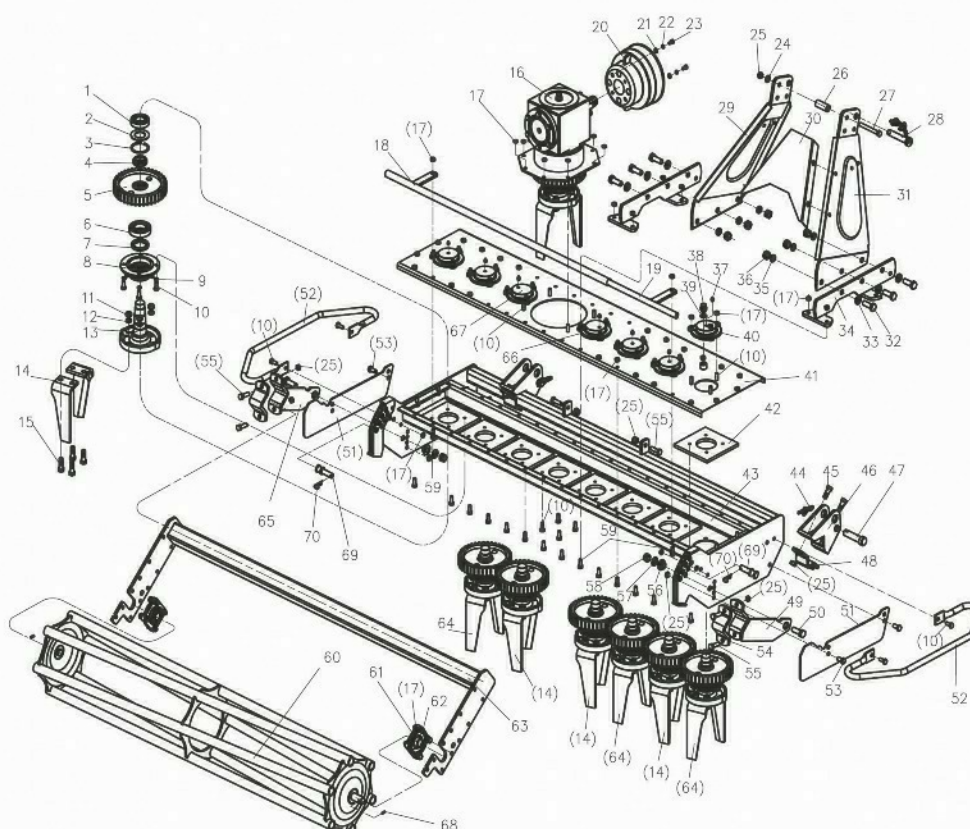

36	GB 6170-86	Nut M16	6	
37	GB1152-89	Frank press oiling cup M10x1	8	
38	CBW	Aerate bolt discreteness	2	
39	GB3541-83	Washer 16	2	
40	LXG170.102	Rotor support above panel(one	6	
41	LXG170.015	Above cover board jointing	1	
42	LXG170.132	Mat	8	
43	LXG170.016	Engine rack jointing	1	
44	200.56.011	Snap pin chain	2	
45	GB 5783-86	Bolt M12x40	4	
46	LXG170.130	Stirrup(two)	2	
47	LXG170.106	Pin (one)	2	
48	LXG170.131	Stirrup(one)	2	
49	LXG170.021	Unknit rack right connect joi	1	
50	GB 5783-86	Bolt M16x45	2	
51	LXG170.122	Shield	2	
52	LXG170.101	Shield rack	2	
53	GB 5783-86	Bolt M12x30	4	
54	RT150.107	U bolt	2	
55	GB 5783-86	Six corner bolt	18	
56	LXG170.108	Bush	2	
57	GB 97.1-85	Washer 16	2	
58	GB 6184-86	Six corner locknut M16	2	
59	GB 5783-86	Bolt M10x30	10	
60	LXG170.024	Unlnit implement jointing	1	
61	GB/T 7810-1995	Squareness bearing UCFU205	2	
62	GB 5783-86	Bolt M10x40	8	
63	LXG170.025	Unlnit implement connect rack	1	
64	LXG170.109	Colter (two)	8	
65	LXG170.017	Unknit rack left connect join	1	
66	LXG170.103	Rotor support above panel(two	1	
67	LXG170.105	Rotor support above panel(thr	1	
68	GB 879-86	pin 8x36	2	
69	LXG170.250	pin	2	
70	ZL 25.106	pin	2	

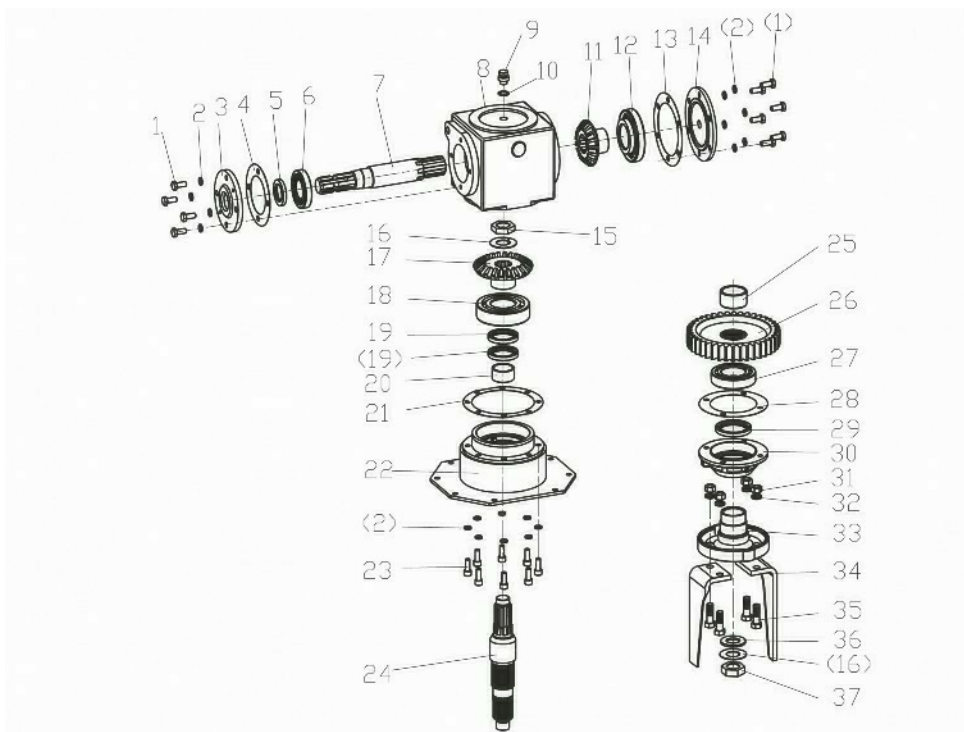

NO.	Part NO.	Name & Specifications	Quantity	Remark
1	GB5783-86	Bolt M10x25	10	
2	GB93-87	Washer 10	17	
3	1G-150.01.116	Front cover	1	
4	1G-150.01.115	Front casket	1	
5	HG4-692-67	Oil seal PD38x55	1	
6	GB297-84	Bearing 7208E	1	
7	1G-150.01.117	Transmission shaft	1	
8	1G-150.01.118	Gearbox	1	
9	CBW-00.011	Breather plug	1	
10	CBW-00.103	Washer	2	
11	1G150.02-04	Small cone-shaped gear	1	
12	GB297-84	Bearing 7310E	1	
13	1G-150.01.111	Back end casket	1	
14	1G-150.01.110	Back end cover	1	
15	1G-150.01.131	Nut M30x1.5	1	
16	1G-150.01.132	Lock washer	2	
17	1G150.04-08	Big cone-shaped gear	1	
18	GB/T 276-94	Bearing 6311	1	
19	GB 13871 - 1992	Oil seal 50x68x8	10	
20	LXG170.138	Bushing(two)	1	
21	1G-150.01.114	Casket	1	
22	LXG170.026	Setting	1	
23	GB 70-85	Bolt M10x25	8	
24	LXG170.136	Output axes	1	
25	LXG170.135	Bushing	1	
26	LXG170.133	Output gear(one)	1	
27	GB/T 276-94	Bearing 6211	1	
28	LXG170.128	Gasket	8	
29	GB 13871 - 1992	Oil seal PB-60x80x8	1	
30	LXG170.147	Bearing seat(one)	1	
31	GB 6170-86	Nut M14	32	
32	GB 93-87	Washer 14	32	
33	LXG170.126	Colter setting seat	1	
34	LXG170.123	Colter (two)	8	
35	GB 5782-86	Bolt M14x40	32	
36	LXG170.125	Washer 30	1	
37	1G-150.01.131A	Nut M30x1.5x14	1	



1-877-876-7895
WWW.BETSTCO.COM



FHM
FARMER-HELPER
MACHINERY COMPANY

Parts Request Form

Fax to 541-895-2756 or E-mail
cservice@betstproducts.com

Name: _____

Address: _____

City State Zip: _____

Phone: _____

E-mail: _____

Model Number: _____

Serial Number: _____

Purchased From: _____

Purchase Date: _____

Item No.	Description	Qty	Price	Amount

Comments:



Farmer Helper Brand LIMITED WARRANTY



Unless otherwise stated on purchase invoice, Betst LLC. warrants to original Purchaser that Farmer Helper products are free from major defects in material under normal use and service for a period of Two (2) Years from the date the product is purchased or shipped, whichever is later. Commercial use 180 days. Use at address that is not yours, is considered commercial use. Consumable, Expendable, Wear Items (Examples: Rubber & plastic parts, hydraulic hoses, belts, tires, cables, blades, tines, wedges, teeth, tips, chains, pins, brushes, filters, etc.) and cracked hydraulic pumps, bent or broken cylinder rods are not covered under this warranty. Warranty does not cover items that have been modified, damaged by abuse or usage not in accordance with design or maintenance.

Betst LLC. obligation under this warranty is to repair or replace defective product upon approval by; Betst LLC., 83371 Melton Rd. N., Creswell OR 97426 that Warranty Claim is Valid. Product shall be returned upon request of Betst LLC. Transportation charges to be prepaid by buyer. **Gasoline or diesel engines used to powered Farmer Helper products are covered by the warranty of the appropriate engine manufacture and Purchaser must look to the engine manufacture for all issues relating to engine operation.**

Betst LLC. assumes no responsibility for outside labor.

PERMISSIBLE BY APPLICABLE LAW, BETST LLC. HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, ANY IMPLIED WARRANTIES WITH RESPECT TO THE PRODUCT PURCHASED, WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, BETSTCO HEREBY EXPRESSLY DISCLAIMS ALL LIABILITY FOR PRODUCT DEFECT OR FAILURE, CLAIMS THAT ARE DUE TO NORMAL WEAR, PRODUCT MISUSE, ABUSE, PRODUCT MODIFICATION, IMPROPER PRODUCT SELECTION, NON-COMPLIANCE WITH ANY CODES, OR MISAPPROPRIATION. BETST LLC. MAKES NO WARRANTIES TO THOSE DEFINED AS "CONSUMERS" IN THE MAGNUSON-MOSS WARRANTY-FEDERAL TRADE COMMISSION IMPROVEMENTS ACT. THE FOREGOING EXCLUSIONS OF IMPLIED WARRANTIES DO NOT APPLY TO THE EXTENT PROHIBITED BY LAW. PLEASE REFER TO YOUR LOCAL LAWS FOR ANY SUCH PROHIBITIONS

THERE SHALL BE NO LIABILITY FOR PRODUCT LIABILITY OR LIABILITY ON THE PART OF BETST LLC. FOR ANY GENERAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE SALE OR USE OF ANY PRODUCTS SOLD BY BETST LLC. OR AN AGENT THEREOF. BETST LLC. MAKES NO WARRANTIES, EXPRESS OR IMPLIED, (INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTABILITY OR FITNESS OF THE PRODUCTS FOR ANY PURPOSE) WITH RESPECT TO THE PRODUCTS COVERED BY THIS AGREEMENT EXCEPT AS IN THIS PARAGRAPH OTHERWISE EXPRESSLY PROVIDED.

THIS IS THE SOLE AND ONLY WARRANTY OF Farmer Helper PRODUCTS. NO OTHER WARRANTY IS APPLICABLE, EITHER EXPRESSED OR IMPLIED, IN FACT OR BY LAW,

This warranty shall not be interpreted to render Betst LLC, or any authorized agent liable for injury or damages of any kind or nature, direct, consequential, or contingent, to person or property.

The sole and only remedy in regard to any defective products shall be the repair or replacement thereof as herein provided. Betst LLC., agent(s) of Betst LLC. shall not be liable for any consequential, special, incidental or punitive damages resulting from or caused by any such defects.

Betst LLC. reserves the right to make improvements in design or changes in specifications at any time, without incurring any obligations to owners of units previously sold.

No one is authorized to alter, modify, or enlarge this warranty nor the exclusions, limitations, and reservation thereof.

Farmer Helper (877) 876-7895: cservice@betstproducts.com

WARRANTY VOID IF REGISTRATION IS NOT RECEIVED OR RECORDED ONLINE WITHIN 30 DAYS OF PURCHASE DATE OR SHIP DATE, WHICHEVER IS LATER.

FMH REGISTRATION

Item _____ Model # _____ Purchase Date ____/____/____

Purchased From: _____ Gift ☐ Inv#/Order# _____

Owner Name: _____ Serial # (if Applicable) _____

Owner Address: _____

City: _____ County: _____ ST: _____ Zip Code: _____

Phone: _____ Email: _____

Acceptance of responsibility:

I (Purchaser) have read operators manual and Limited Warranty or someone has read/and explained all instructions to me. I understand this warranty does not cover any labor and that all disputes will be settled by binding arbitration. Binding arbitration is conducted by the Better Business Bureau (BBB) located at 4004 SW Kruse Way Place Ste 375 Lake Oswego OR 97035 or the current BBB location closest to Betst LLC., I acknowledge my Limited Warranty is void if any attempt to repair or replace defective parts has been made by unauthorized personnel. I acknowledge receipt of my Operators Manual and have read the Safe Operation Section. I acknowledge understanding maintenance and safe operation requirements, item specifications, operation, controls, and storage requirements. **I understand that I alone am responsible for proper maintenance, care and safe operation of this Farmer Helper item.**

I (Purchaser) agree that persons not familiar with the operation of this item should not be allowed to use it. Children especially should not operate or be near Power Products when in use. **ANYONE OPERATING VALUE-LEADER PRODUCTS SHOULD HAVE READ OPERATIONS MANUALS AND SAFETY MANUALS.**

Owners Signature: x _____ **Date:** ____/____/____

You must sign this warranty and mail or fax copy to Betst LLC., 83371 Melton Rd N.#3, Creswell OR 97426. If you prefer you may complete your registration via email cservice@betstproducts.com. This warranty is not effective unless the Purchaser completes Registration and Warranty Form within 30 days of purchase or ship date whichever is later.

NOTE: We may refuse warranty of any kind unless Betst LLC., receives a completed, legible and signed warranty registration. It is the responsibility of the purchaser to assure that registration document is received by Betst LLC.

Fax to 541-895-2756

Betst Products / Farmer Helper 1-541-895-3083 Support@betstproducts.com

2 YEAR EXTENDED WARRANTY & REGISTRATION Farmer Helper Machinery Branded Products

2 YEAR EXTENDED WARRANTY

2 Year Extended Warranty amends to original Recorded Warranty Registration the time period of described coverage. Extended Warranty does not apply to Consumable and Expendable Items as described in Product Warranty Registration.

This Amendment does not affect any other part of recorded Warranty Registration or Policy.

No one is authorized to alter, modify, or enlarge this Amendment to original recorded warranty registration.

EXTENDED REGISTRATION & PAYMENT MUST BE RECEIVED WITHIN 30 DAYS OF PURCHASE DATE

EXTENDED WARRANTY REGISTRATION

Product & Model # : _____

Serial #: _____

Owner Name: _____

Betst LLC. Invoice # _____

Acceptance of responsibility:

I (Purchaser) have Read and understand the Extended Warranty or someone has read/and explained all the above to me. I understand this extended warranty does not cover any labor. I have filed my Original Warranty Registration and fully understand my requirements. **I understand that I alone am responsible for proper maintenance, care and safe operation of this tractor implement.**

I (purchaser) also understand that persons not familiar with the operation of this equipment should not be allowed to use it. Children especially should not operate or be near equipment. ANYONE OPERATING EQUIPMENT SHOULD HAVE READ ALL EQUIPMENT OPERATIONS MANUALS AND SAFETY MANUALS..

Owners Signature: x _____

Date: _____

You must sign this extended warranty and Fax to 541-895-2756, Email to Support@Betstco.com or mail copy to Betst LLC., 83371 Melton Rd N.#3, Creswell OR 97426. This extended warranty is not effective unless the Purchaser faxes or mails this Registration Form within 30 days of purchase. NOTE: The Manufacturer may refuse warranty of any kind unless Betst LLC. receives a completed, legible and signed extended warranty registration. It is the responsibility of the purchaser to assure that this registration document is received by Betst LLC.

Extended Warranty not valid unless payment is made before or when submitted. To Make Payment for Extended Warranty Call: 1-541-895-3083